

### CANON METER READINGS

Model #	Instructions	Type of machine
1310	Go to "add features". Press "+", "counter check", then set button. Should see "total T1" and the numbers (meter).	b/w (IR)
1330	Press the "Additional Function" key, located above the display screen. Scroll to # 8. Press "Set" located at the bottom of the display screen.	b/w (IR)
1370F	Press the "Additional Function" key, located above the display screen. Scroll to # 8. Press "Set" located at the bottom of the display screen.	b/w (IR)
1600	Press the counter button at the top of the control panel. The display will show 4 meter reading options. Record the number next to Total 1.	b/w (IR)
1630	Press the "Additional Function" key, located above the display screen. Press the arrow keys to # 8. Press "Set" located at the bottom of the display screen. T1 is the meter.	b/w (IR)
1670F	Press the "Additional Function" key, located above the display screen. Scroll to # 8. Press "Set" located at the bottom of the display screen.	b/w (IR)
2000	Press the counter button at the top of the control panel. The display will show 4 meter reading options. Record the number next to Total 1.	b/w (IR)
2010f	Press the counter button at the top of the control panel. The display will show 4 meter reading options. Record the number next to Total 1.	b/w (IR)
2200	Press the counter button at the top of the control panel. The display will show 4 meter reading options. Record the number next to Total 1.	b/w (IR)
2800	Press the counter button at the top of the control panel. The display will show 4 meter reading options. Record the number next to Total 1.	b/w (IR)
3300I	Press the counter button at the top of the control panel. The display will show 4 meter reading options. Record the number next to Total 1.	b/w (IR)
3300	Press the counter button at the top of the control panel. The display will show 4 meter reading options. Record the number next to Total 1.	b/w (IR)
3320	Press the counter button at the top of the control panel. The display will show 4 meter reading options. Record the number next to Total 1.	b/w (IR)
400S	Press the counter button at the top of the control panel. The display will show 4 meter reading options. Record the number next to Total 1.	b/w (IR)
5000	Press the counter button at the top of the control panel. The display will show 4 meter reading options. Record the number next to Total 1.	b/w (IR)

5000I	Press the counter button at the top of the control panel. The display will show 4 meter reading options. Record the number next to Total 1.	b/w (IR)
6000	Press the counter button at the top of the control panel. The display will show 4 meter reading options. Record the number next to Total 1.	b/w (IR)
7200	Press the counter button at the top of the control panel. The display will show 4 meter reading options. Record the number next to Total 1.	b/w (IR)
IR85	Press the counter button at the top of the control panel. The display will show 4 meter reading options. Record the number next to Total 1.	b/w (IR)
8500	Press the counter button at the top of the control panel. The display will show 4 meter reading options. Record the number next to Total 1.	b/w (IR)
105	Press the counter button at the top of the control panel. The display will show 4 meter reading options. Record the number next to Total 1.	b/w (IR)
IR220	Go into Additional Functions-hit the set key-then hit the minus key and it tells the count.	b/w (IR)
CLC4000	Press the counter button at the top of the control panel. Copier will display the black/white meter. To get the color meter use the following formula: Total meter - black/white = color meter	COLOR (C)
C3100	Press the counter button at the top of the control panel. Copier will display the black/white meter. To get the color meter use the following formula: Total meter - black/white = color meter	COLOR (C)
C3200	Press the counter button at the top of the control panel. Copier will display the black/white meter. To get the color meter use the following formula: Total meter - black/white = color meter	COLOR (C)
C5000	Press the counter button at the top of the control panel. Copier will display the black/white meter. To get the color meter use the following formula: Total meter - black/white = color meter	COLOR (C)
6800	Press the counter button at the top of the control panel (above the red stop button). The display will show 3 separate readings. Record "total black" as your b/w reading. To get the color meter subtract the "total black" from "total 1".	COLOR (C)
5000	Machine has a mechanical meter located inside the front door on the left hand side. To get the color meter use the following formula Total meter – b/w = color meter.	Color Laser (CL)
3900	Press the counter button at the top of the control panel. Copier will display the black/white meter. To get the color meter use the following formula: Total meter - black/white = color meter	Color Laser (CL)
5020	Press the counter button at the top of the control panel. Copier will display the black/white meter. To get the color meter use the following formula: Total meter - black/white = color meter	Color Laser (CL)
6020	Press the counter button at the top of the control panel. Copier will display the black/white meter. To get the color meter use the following formula: Total meter - black/white = color meter	Color Laser (CL)

1100	Press the counter button at the top of the control panel. Copier will display the black/white meter. To get the color meter use the following formula: Total meter - black/white = color meter	Color Laser (CL)
1180	Press the counter button at the top of the control panel. Copier will display the black/white meter. To get the color meter use the following formula: Total meter - black/white = color meter	Color Laser (CL)

C2060P

NO METER

ALL CANON FAX MACHINES HAVE NO METER WITH THE EXCEPTION OF THE 510.

C2060P

- 1) Lift the lid. FAX
- 2) Press data registration (button)
- 3) Press #
- 4) Press Report (button)
- 5) Arrow down until you see system dump
- 6) Press set
- 7) Meter will print (Several pages)
- 8) The number we need is the number that appears next to PRINT on page one